

CHAPTER 2

Operator Interface

2.1 Operators Panel

The operators panel is located on the left hand side of the main lid of the machine. It contains the display screen and the controls required to run the machine and enter data as follows:

- Large flat screen liquid crystal display (LCD).
- 12 key keypad for data entry, including CE button to clear the entry.
- Four direction arrow keys to move the cursor around the screen.
- MEM/PRINT push button to save or print count data.
- ENTER push button to confirm that data has been entered.
- START/STOP push button to start and stop the machine.
- CLEAR push button has different functions in different programs.
- There are five keys below the LCD screen. The function of each of these keys depends on which setup is used and which menu is currently displayed on the screen, and can be defined in the Supervisor Mode. These variable function keys are known as softkeys. The current function of each softkey is displayed at the bottom of the screen directly above the softkey.

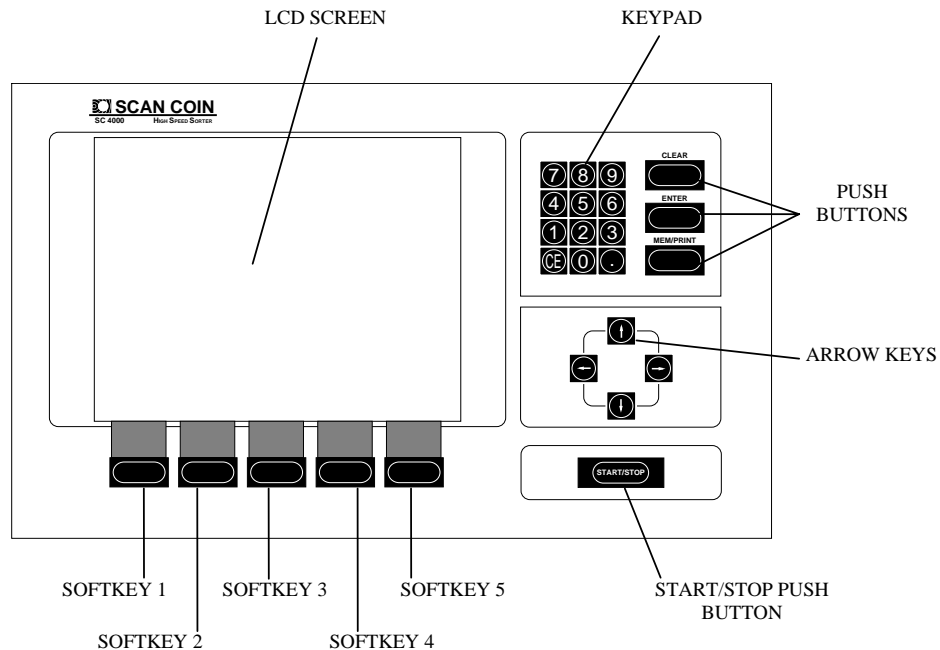


Figure 2.1 Operators Panel